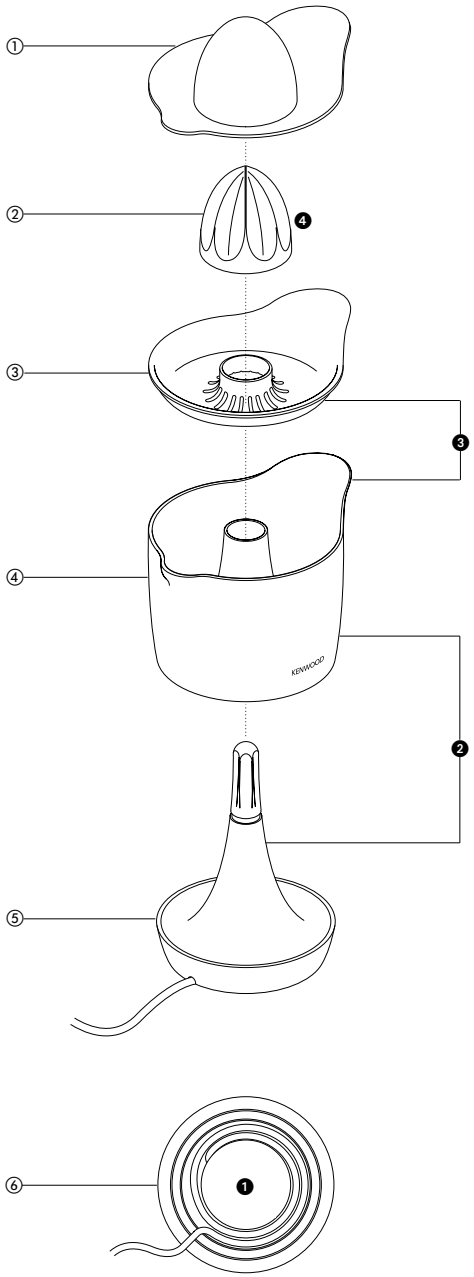

Use your new Kenwood Citrus Juicer to squeeze the juice from citrus fruit eg oranges, lemons, limes and grapefruits.

safety

- Switch off and unplug:
  - before fitting or removing parts
  - after use
  - before cleaning.
- Never let the power unit, cord or plug get wet.
- Never use a damaged machine. Get it checked or repaired: see 'service'.
- Don't let the cord touch hot surfaces or hang down where a child could grab it.
- Don't let children or infirm people use the machine unsupervised.
- Don't let children play with the machine.
- Only use the machine for its intended domestic use.

important

- **Don't press too hard on the cone or run for longer than 10 minutes - you may damage your juicer.**

before plugging in

Make sure your electricity supply is the same as the one shown on the underside of the machine.

important (UK) only

- The wires in the cord are coloured as follows:
  Blue = Neutral, Brown = Live.
- This machine complies with European Economic Community Directive 89/336/EEC.

before using for the first time

1 Remove all packaging and any labels.
2 Wash the parts: see 'cleaning'.
3 Wrap any excess cord around the bracket on the underside of the power unit ❶.

key

① dust cover
② cone
③ strainer
④ juice collector with pouring lip
⑤ power unit
⑥ cord wrap

to use your citrus juicer

1 Place the juice collector on to the power unit ❷.
2 Put the strainer inside the juice collector ❸, then add the cone ❹.
3 Cut the fruit in half. Then press each half down on to the cone and the juicer will operate automatically.
- During use the cone may change the direction it rotates. This is normal and ensures that the maximum amount of juice is squeezed out of the fruit.
- To help with juice extraction move the fruit from side to side.

4 To stop the juicer lift the fruit from the cone.
5 To pour the juice, remove the cone and strainer from the juice collector and pour using the pouring lip.

- When juicing large quantities, empty the strainer regularly to prevent the build up of pulp and seeds. Empty the juice collector as required.

cleaning

- Always switch off, unplug and dismantle before cleaning.
- Replace the dust cover after use.

power unit

- Wipe with a damp cloth, then dry.

other parts

- Wash in hot soapy water, then dry.
- Alternatively they can be washed on the top rack of your dishwasher.

service and customer care

- If the cord is damaged it must, for safety reasons, be replaced by Kenwood or an authorised Kenwood repairer.

UK

If you need help with:

- using your machine or
- servicing or repairs (in or out of guarantee)

☎ call Kenwood on **023 92392333** and ask for Customer Care. **Have your model number ready** – it's on the underside of the power unit. Alternatively, contact your authorised Kenwood repairer: look in YELLOW PAGES under 'Electrical appliance repairs'.

- **Eire**
  See our advertisement in Golden Pages.
- **other countries**
  Contact the shop where you bought your machine.

guarantee (uk only)

If your machine goes wrong within one year from the date you bought it, we will repair it (or replace it if necessary) free of charge provided:

- you have not misused, neglected or damaged it;
- it has not been modified (unless by Kenwood);
- it is not second-hand;
- it has not been used commercially;
- you have not fitted a plug incorrectly; and
- **you supply your receipt to show when you bought it.**

This guarantee does not affect your statutory rights.

KENWOOD

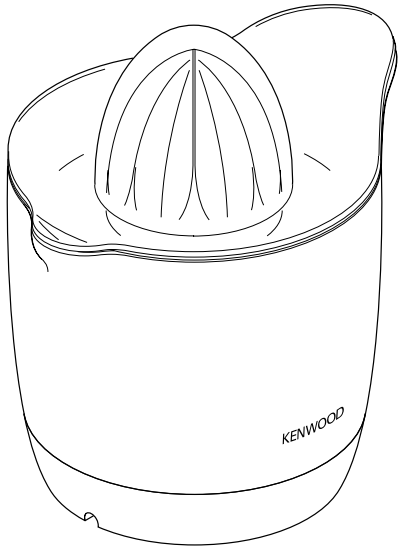

Kenwood Limited, New Lane, Havant, Hampshire PO9 2NH, UK
www.kenwood.co.uk
2687/2

JE260 series

JE270 series